




ALL SEASON SCREEN™

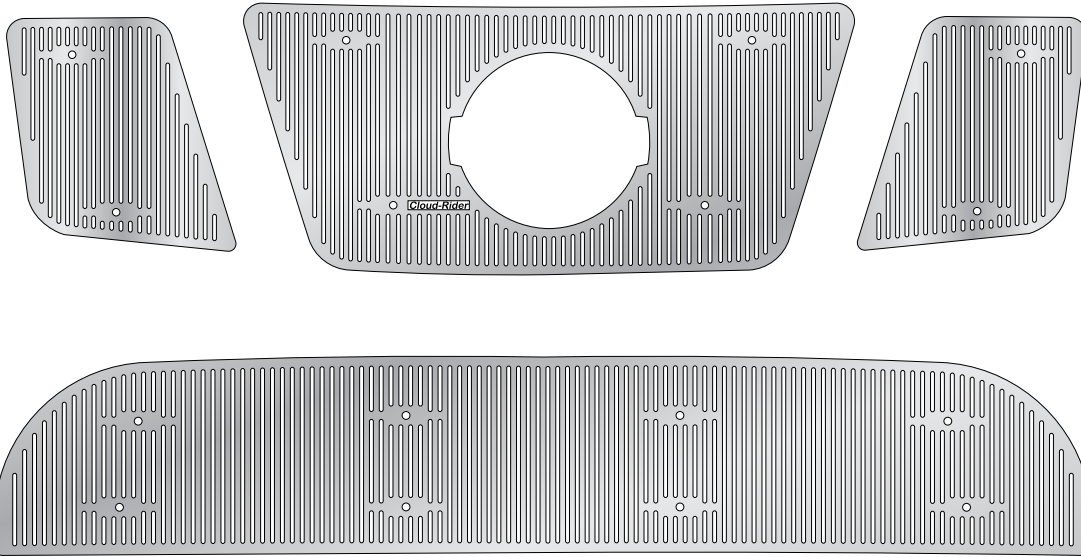

XX-7055

Mirror Stainless & Black Powder Coated
With Blockheater

XX-7056

Mirror Stainless & Black Powder Coated
Without Blockheater



Shown with 24-7056

2008-2014 Nissan Armada

Visit our web site at www.cloud-rider.com

Cloud-Rider Designs Ltd.

All Season Screen™

Installation Instructions For Part Numbers:
XX-7055 & XX-7056



**Please Read
Before Installing**

Attention Installer: Instructions must be provided to Purchaser
Your All Season Screen™ comes with the following list of hardware.

Upper Screens

- 4x L2063 Mounting Clip
- 4x C2250 Mounting Clip
- 8x 1 3/4" Truss Head Screw
- 8x Locknut

Bumper Screen

- 6x J1000 Mounting Clip
- 2x U122 Mounting Clip
- 8x 1 3/4" Truss Head Screw
- 8x Locknut

Assemble your screen as per diagrams and photos.

Upper Screen

1. Insert 1 3/4" Truss Head Screws through mounting holes.
2. Screw on **L2063 Mounting Clips**.
3. Screw on **Locknuts** until one full thread shows past locknut. (This is for your convenience so you don't lose the clips during installation or removal.)
4. Maneuver the clips through the diamond shaped pattern on the grill. Hook the bent leg of the clip on to the screw, while tightening as shown in Figure 1.
5. Tighten until finger tight. Do not over tighten.
6. Reverse the process to remove.

Upper Middle Screen

1. Open the hood and place the screen into the middle opening.
2. Insert 1 3/4" Truss Head Screws through the mounting holes and reach behind the grill to hold the **C2250 Mounting Clips** in place while tightening as shown in Figure 2.
3. Screw on Locknuts until one full thread shows past locknut. (This is for your convenience so you don't lose the clips during installation or removal.)
4. Tighten to secure the screen. Do not over tighten.
5. Reverse the process to remove.



Your vehicle is designed to operate at a specific temperature. Remove your Winter-Shield™ when towing heavy loads or when the outside temperature reaches 0°C (32°F). It is your responsibility to monitor your vehicles operating temperature.



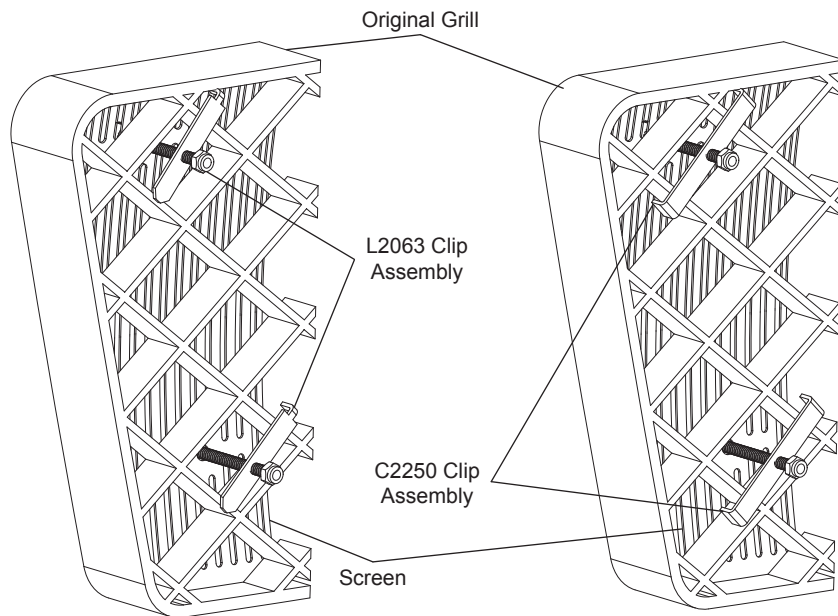


Figure 1

Figure 2

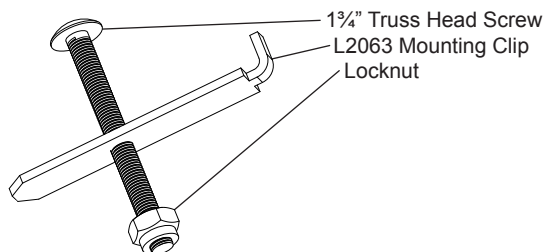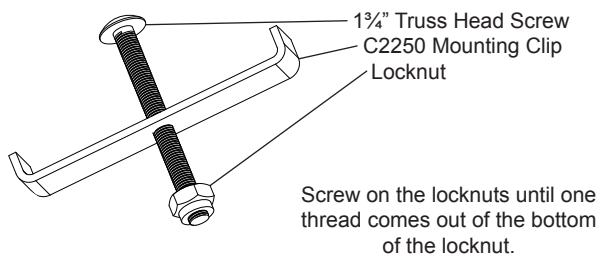

Cloud-Rider® products are protected by Canadian and U.S. Industrial Design Registrations:
• D-CICAN/2A - 83659 / DES 412.310 • D-CICAN/2D - 83660 • D-CICAN/3A - 83661 / DES 402.615 • D-CICAN/3C - 83662 / DES 430.096 • D-CICAN/4A - 83663 • D-CICAN/4C - 83664 / DES 403.650
• D-CICAN/5A - 83884 • D-CICAN/5C - 83885 / DES 420.968 • D-CICAN/6A - 83665 / DES 427.560 • D-CICAN/6B - 83666 • D-CICAN/8A - 86613 / DES 431.519 • D-CICAN/8B - 86614 • D 479.180
• D 479.181 • D 479.182 • D 479.856 • D 482.310 • D 492.241 • D-CICAN/5A - 83884 • D 512.350 • D 511.722 • D-CICAN/5C - 83885 / DES 420.968
Canadian Patent Numbers 2,406,439 / 2,366,081 • International Patent Numbers 6,729,652 / 6,938,929 / 7,066,493 • Other Canadian & International Patents Pending.
© 2009 Cloud-Rider® Designs Ltd. All rights reserved. Cloud-Rider®, Cloud-Rider Designs® and the Cloud-Rider® logo are registered trademarks of Cloud-Rider® Designs Ltd.

Cloud-Rider Designs Ltd.

All Season Screen™

Installation Instructions For Part Numbers:
XX-7055 & XX-7056

Installation Instructions Continued

Assemble your screen as per diagrams and photos.

Lower Screens

1. Insert 1¼" Truss Head Screws through mounting holes.
2. Screw on the **J1000 Mounting Clips**.
NOTE: Use the U122 Mounting Clips for the two lower and outer mounting holes of screen.
3. Screw on the Locknuts until one full thread shows past locknut. (This is for your convenience so you don't lose the clips during installation or removal.)
4. Put screen into bumper opening and hook the clips as shown in Image 1 and Image 2.
5. Tighten until finger tight. Do not over tighten.
6. Reverse the process to remove.



Your vehicle is designed to operate at a specific temperature. Remove your Winter-Shield™ when towing heavy loads or when the outside temperature reaches 0°C (32°F). It is your responsibility to monitor your vehicles operating temperature.

